
SIWADCP-V3



Preconfigured Signum Complete Scale





SPECIFICATIONS:

Weighing Capacity
Readability

Linearity

Standard Temp.

7 kg

0.1g

5± 0.3g.

5± 0.2g

7 kg

10°C to +40°C

10°C to +40°C

Protection Rating IP 65

Platform Size (WxD) 13.7" x 9.4" Dimensions (WxD) 13.7" x 16.5" Displ. Dim. (WxHxD) 9.5" x 2.5" x 7" Display Cable Length 6 feet

Net Weight 26 1lb.

Type of Display Backlit 14-segment

Overload Capacity 300 kg.

FEATURES:

- The new Signum from Sartorius is a compact industrial scale that offers exceptional performance features and is very easy to operate. Flexible and ergonomic thanks to adaptable mounting options of the control unit in a slim-line design.
- Application Level 1 Basic Weighing Large keys with positive click action Large backlit 14-segment display

IP65 Protection Rating

The IP 65 protection rating means the scale is dust-tight and with low-pressure water jet protection. This feature makes these scales suitable for use in some of the harshest industrial environments.

Optional Additional Interfaces


Ethernet TCP/IP RS232/422/485 Profibus-DP

Analog: 4-20mA, 0-20mA, 0-10V 16 Bit

Digital I/O: 5 in-5 out Opto 130

RS232 Data Interface

The SIWADCP-V3 scales come with a bi-directional interface, which allows for simple connection to a printer or computer for easy data acquisition and automation capabilities. 25-pin D-sub female connector

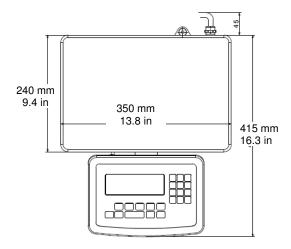

Sartorius Corporation 131 Heartland Boulevard Edgewood New York 11717 Toll Free: (800) 635-2906

(631) 254-4249 Fax (631) 254-4252