
## SIWRDCP-V13



# Preconfigured Signum Complete Scale



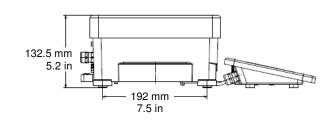

## **SPECIFICATIONS:**

Weighing Capacity
Readability
15 kg
0.5 g
Linearity
≤± 0.5 g.

Reproducibility
≤± 0.2 g
Response Time
< 1 seconds
Operating Temp.
10°C to +40°C

Protection Rating IP 65

Platform Size (WxD) 13.7" x 9.4"
Dimensions (WxD) 13.7" x 16.5"
Displ. Dim. (WxHxD) 9.5" x 2.5" x 7"
Display Cable Length 6 feet
Net Weight 26 1lb.

Type of Display Backlit 14-segment

Overload Capacity 300 kg.

### **FEATURES:**

- The new Signum from Sartorius is a compact industrial scale that offers exceptional performance features and is very easy to operate. Flexible and ergonomic thanks to adaptable mounting options of the control unit in a slim-line design.
- Application Level 2 14 keys, 14 segment display, Applications include Counting, Weighing in Percent, Animal Weighing, Checkweighing, Classification, Totalizing, Net-Total Formulation

#### IP65 Protection Rating

The IP 65 protection rating means the scale is dust-tight and with low-pressure water jet protection. This feature makes these scales suitable for use in some of the harshest industrial environments.

#### Optional Additional Interfaces


Ethernet TCP/IP RS232/422/485 Profibus-DP

Analog: 4-20mA, 0-20mA, 0-10V 16 Bit

Digital I/O: 5 in-5 out Opto 130

#### RS232 Data Interface

The SIWRDCP-V13 scales come with a bi-directional interface, which allows for simple connection to a printer or computer for easy data acquisition and automation capabilities. 25-pin D-sub female connector

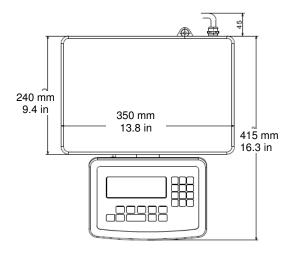

Sartorius Corporation 131 Heartland Boulevard Edgewood New York 11717 Toll Free: (800) 635-2906

(631) 254-4249, Fax (631) 254-4252